# **Instruction Manual**



**Note:** Operator must read and understand this Instruction Manual before using.

# Table

- 1. Brief introduction.
- 2. Main technical performance and parameter
- 3. Component parameter table and assembly steps:
- 4. Safety operation
- 5, Maintenance


# **1**、**Brief** Introduction


DG series drum grab is applied in many industry occasion to transport and stack various drums including steel drum, plastic drum and fiber drum. DG series drum grab contain 4 basis model, the maximum lifting capacity is 360kg, 720kg, 1080kg, 1440kg in order to meet customer's special request.

This manual is of using and maintenance the DG series drum grabs. Before using, please read and understand all the information in the manual to be familiar with this product.


## 2. Main Technical Performance and Parameter

Drum Grab DG360A DG720A

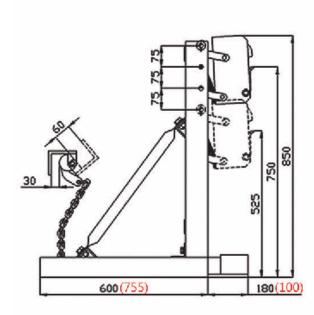


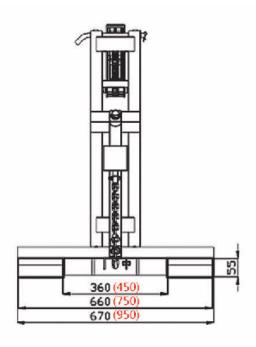


Drum Grab DG360B DG720B

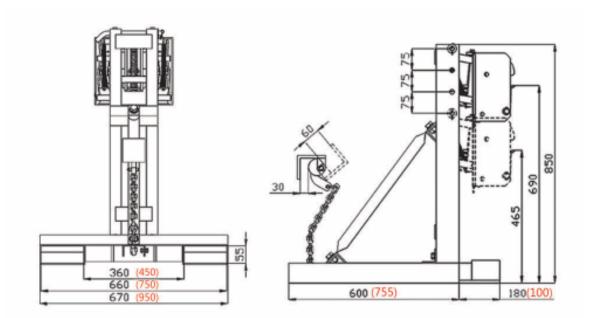




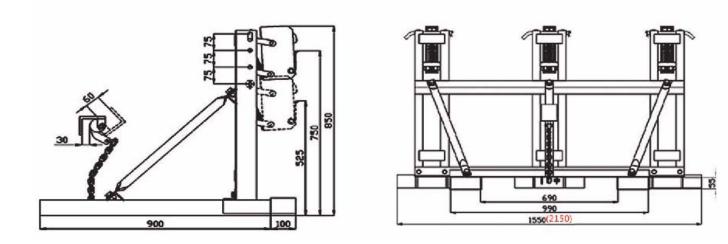

Drum Grab DG1080B DG1440B

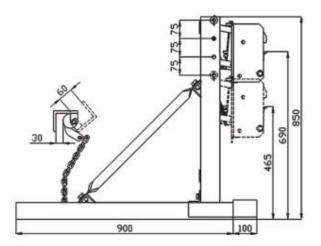

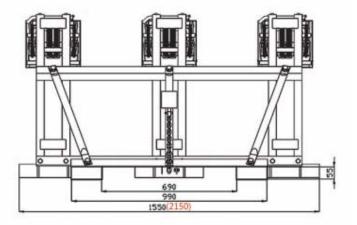


| Model No                                    | DG360A          | DG360B          | DG720A          | DG720B          | DG1080A           | DG1080B           | DG1440A           | DG1440B           |  |
|---|-----------------|-----------------|-----------------|-----------------|-------------------|-------------------|-------------------|-------------------|--|
|   |                 |                 |                 |                 |                   |                   |                   |                   |  |
| Rated load(kg)                              | 360             | 360             | 360*2           | 360*2           | 360*3             | 360*3             | 360*4             | 360*4             |  |
| Net weight(kg)                              | 45              | 52              | 62              | 77              | 98                | 123               | 126               | 158               |  |
| Outline<br>dimension(mm<br>)                | 930*670*<br>850 | 960*670*<br>850 | 930*910*<br>860 | 960*910*<br>850 | 1080*152<br>0*850 | 1110*152<br>0*850 | 2140*108<br>0*850 | 2140*111<br>0*850 |  |
| Load center<br>distance(mm)                 | 1150            | 1150            | 1150            | 1150            | 1150              | 1150              | 1150              | 1150              |  |
| Eagle-grip<br>lowest height                 | 525             | 465             | 525             | 465             | 525               | 465               | 525               | 465               |  |
| Eagle-grip<br>highest height                | 750             | 690             | 750             | 690             | 750               | 690               | 750               | 690               |  |
| Eagle-grip<br>medial height                 | 675~600         | 615~540         | 675~600         | 615~540         | 675~600           | 615~540           | 675~600           | 615~540           |  |
| Singleforksleevesize(mm)                    | 150*55          | 150*55          | 150*55          | 150*55          | 150*55            | 150*55            | 150*55            | 150*55            |  |
| Inner width of<br>double-fork<br>sleeve(mm) | 340             | 340             | 430             | 430             | 670               | 670               | 670               | 670               |  |
| Outer width of<br>double-fork<br>sleeve(mm) | 660             | 660             | 750             | 750             | 990               | 990               | 990               | 990               |  |
| Fork sleeve<br>length                       | 750             | 750             | 750             | 750             | 900               | 900               | 900               | 900               |  |

Technical Data:


# 3. Component parameter table & assembly steps:

DG360 Single Drum Grabber

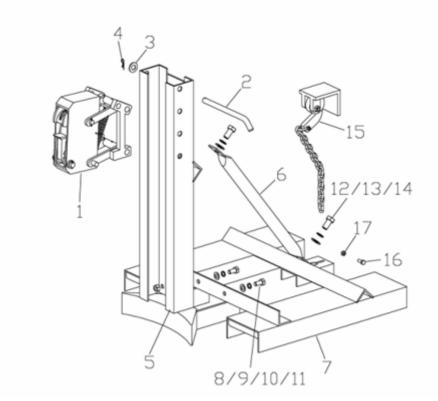

| NO. | NAME                 | UNIT  | QTY | NO. | NAME               | UNIT  | QTY |
|-----|----------------------|-------|-----|-----|--------------------|-------|-----|
| Y1  | Eagle-grip assembly  | piece | 1   | Y10 | Φ 12 spring gasket | piece | 2   |
| Y2  | Eagle-grip fixed pin | piece | 1   | Y11 | φ12 flat gasket    | piece | 2   |
| Y3  | φ 16 flat gasket     | piece | 1   | Y12 | M16X30 bolt        | piece | 2   |
| Y4  | R type pin           | piece | 1   | Y13 | φ16 spring gasket  | piece | 2   |
| Y5  | Bottom               | piece | 1   | Y14 | φ16 flat gasket    | piece | 2   |
| Y6  | Connecting rod       | piece | 1   | Y15 | Safety self lock   | piece | 1   |
| Y7  | Pedestal             | piece | 1   | Y16 | M8X20 bolt         | piece | 1   |
| 78  | M12X25 bolt          | piece | 2   | Y17 | M8 nut             | piece | 1   |
| Y9  | M12 nut              | piece | 2   |     |                    |       |     |

#### DG720 Double Drum Grabber

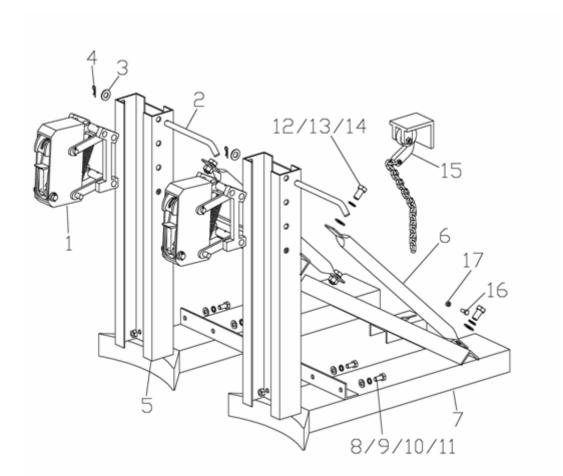

| NO. | NAME                 | UNIT  | QTY | NO. | NAME               | UNIT  | QTY |
|-----|----------------------|-------|-----|-----|--------------------|-------|-----|
| Y1  | Eagle-grip assembly  | piece | 2   | Y10 | Φ 12 spring gasket | piece | 4   |
| Y2  | Eagle-grip fixed pin | piece | 2   | Y11 | φ12 flat gasket    | piece | 4   |
| Y3  | φ16 flat gasket      | piece | 2   | Y12 | M16X30 bolt        | piece | 4   |
| Y4  | R type pin           | piece | 2   | Y13 | φ16 spring gasket  | piece | 4   |
| Y5  | Bottom               | piece | 1   | Y14 | φ16 flat gasket    | piece | 4   |
| Y6  | Connecting rod       | piece | 2   | Y15 | Safety self lock   | piece | 1   |
| Y7  | Pedestal             | piece | 1   | Y16 | M8X20 bolt         | piece | 1   |
| 78  | M12X25 bolt          | piece | 4   | Y17 | M8 nut             | piece | 1   |
| Y9  | M12 nut              | piece | 4   |     |                    |       |     |

### Assembly steps for DG360A and DG720: :

1. Fix the screws which connect the bottom frame and the front frame, use parts Y8, Y9, Y10, Y11:



2/fix the connection rod(Y6) on the frame, use parts Y12 Y13 Y14:



3/take out the fixed pin(Y2) then install the clamps(Y1) on the frame(Y5), use the fixed pin(Y2). At last, use the washer and R shape pin(Y3, Y4) to fix:





### 4. Safety Operation

DG series drum grab using instruction

1.Adjust the fork distance of forklift according to the fork sleeve size of drum grab. Drive the forklift to make the two forks enter into fork sleeve simultaneously. Then connect the forklift frame beam (the beam mounted with fork) and drum grab with safety chain.

2. Through transportation, forklift driver should lean a little forward the mast (This point is very important; otherwise there's no following accurate action!) And make the eagle-grip a little lower than the above rim of drum. Drive forklift to let drum grab contact side wall. Then lift the fork, the eagle-grip grip the above rim of drum automatically. The heavier the drum, the bigger the eagle-grip forces. Then easily accomplish the grip & transportation.

3. This product can adjust the drum grab's height to adapt to different request. In the situation of transporting the different height drum or different type drum simultaneously, the round hole in the mast is setting to adjust height.4. When place drum, the mast should retrieve the same lean position as griping the drum. Drop down the fork slowly until the drum is steady placed, then the eagle-grip will loose automatically.

5.If use this product for frequently long time, suggest replacing all the spring, pin roll one time every year in order to ensure long life span of this product.

# **5**、Maintenance

1. Make sure that the weight of drum and the stuff is less than the rated capacity of this product!

2. This product is heavy duty pure mechanical drum grab. Please make sure the drum has been gripped safely before drive the forklift.

3. Before using, confirm every kinds of spring, pin roll is in the normal position. And in order to ensure safety action to add a little light mechanical lubricant in all mobile parts.

4. In the process of working, should avoid the operator stand in front of this product and below the drum. Turning or bumpy place making the driver slow down the forklift, be careful!

5. If abnormal or not flexible, contact our company or your distributor ASAP. Don't disassemble by yourself.