


# ***ASSEMBLY INSTRUCTION***

## ***57252 Post trolley***


### ***List of items packed***

**Part 1**

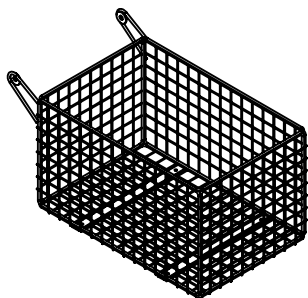


1pcs

**Part 2**

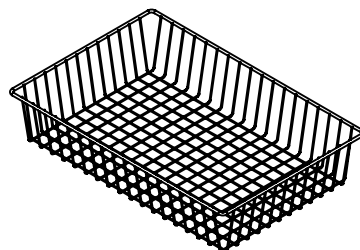


1pcs

**Part 3**

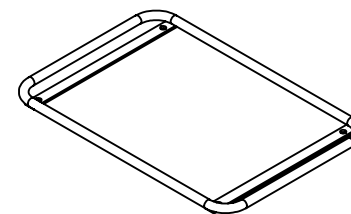


1pcs

**Part 4**

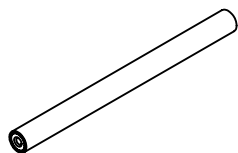


1pcs

**Part 5**

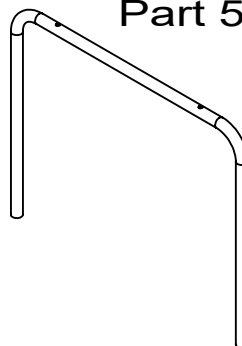


2pcs

**Socket Head Screw M6x30mm**

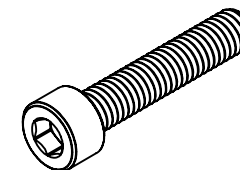

4pcs

**Socket Head Screw M10x20mm**

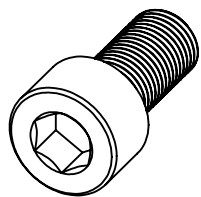

2pcs

**Split Lock Washer M10**




2pcs

**Nylon-Insert Locknut M6**



4pcs

STEP1

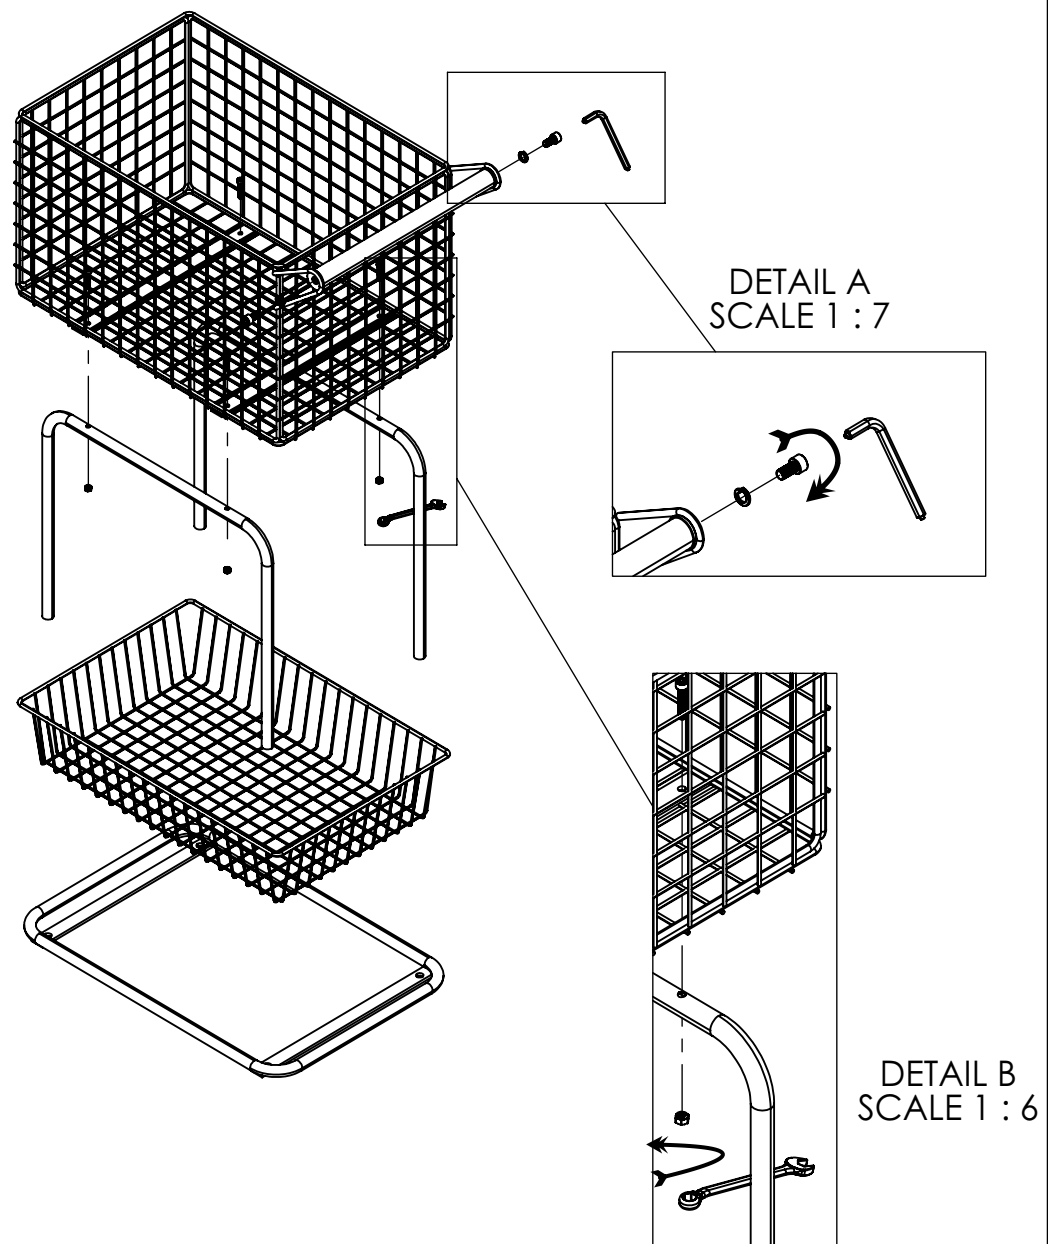

STEP2

